


PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

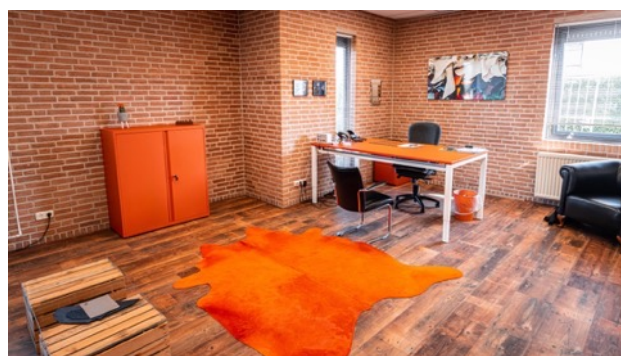

Quality and continuity are a priority.

Leather is a natural and sustainable product. Qualities that are reflected in the way we do business. Since our start in 1929, we have been guided by sustainability. This applies to our collection, our relationship with customers, but certainly also to our contact with suppliers. We don't just want to provide customers with the best leather today, but also tomorrow and in the future.

That's why Van Oosterum Leder keeps a close eye on trends and developments in the field of leather. It is important for you to be able to rely on the quality of a product. The processing of leather into finished product should be easy and predictable, time and time again. Van Oosterum Leder understands this. We are constantly working to enrich and refine our collection, so that you always have access to the best leather types and can easily respond to market developments. As an entrepreneur, you are also looking for quality and continuity.

Van Oosterum Leder has 94 years of experience serving customers in the orthopaedic world. You can rely on us!



MOLDING LEATHER

Orthotic molding leather

Molding leather is a type of leather that is specifically designed to be used in orthopaedic applications where a customized fit is required. This type of leather is often used in the production of orthotic and prosthetic devices, such as braces, splints, and casts.

UPHOLSTERY LEATHER

Orthotic Upholstery leather

Orthotic upholstery leather is used in the the production of seating surfaces and cushioning materials for (orthopaedic)wheelchairs. Additionally, upholstery leather can also be used to cover orthopaedic devices, the leather provides a smooth and durable surface that can be easily cleaned and maintained, while also providing a degree of flexibility and support to the underlying device.

LINING LEATHER

Orthotic lining leather

Orthotic lining leather is a type of leather that is specifically designed for use in the lining of orthotic devices. It is typically a soft, supple leather that provides comfort and support to the foot, while also allowing for flexibility and breathability.

UPPER LEATHER

Orthotic upper leather

Upper leather is a type of leather that is used for the upper part of footwear, including shoes, boots, and sandals. It is known for its durability, strength, and ability to conform to the shape of the foot over time, making it a popular choice for orthopaedic footwear. In the orthopaedic world, upper leather is used to make custom orthopaedic shoes and boots for individuals with foot and ankle problems

STRAPS & BRACES LEATHER

Orthotic belt leather

Leather for straps and braces is often made from thicker and heavier hides, such as cowhide or buffalo hide, which have a higher tensile strength and are more resistant to wear and tear. The leather may be treated with oils or waxes to enhance its durability and water resistance, making it suitable for use in a variety of environments.

Van Oosterum Leder has 94 years of experience serving customers in the orthopaedic world. You can rely on us!



PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

MOLDING LEATHER

Vegetable-tanned

Article numbers:

422200114	MOLDING LEATHER 1-1¼ FIRM
422200115	MOLDING LEATHER 1¼-1½ FIRM
422200152	MOLDING LEATHER 1½-2 FIRM
422200225	MOLDING LEATHER 2-2½ FIRM
422200253	MOLDING LEATHER 2½-3 FIRM



Vegetable tanned molding leather.

This is a type of leather that has been tanned using natural substances derived from plants such as bark, leaves, and fruit, instead of chemicals. This process results in a durable and sturdy leather that is ideal for use in orthopedic applications such as prosthetics, shoes, and insoles. The leather is molded to the desired shape and can be customized for each individual user for a comfortable and secure fit. Molding is the process of stretching moist vegetable-tanned leather over a mold or model, such as the last used by shoemakers or the plaster mold used for prosthetics. The leather is held in place using small nails and a molding plier, which stretches the leather as it is nailed into place. The leather is then allowed to dry slowly. As the leather dries, it shrinks and tightens, taking on the shape of the mold or model. Once dry, the nails are removed, and the leather is ready to be trimmed and sewn.

NAME	VEGETABLE TANNED MOLDING LEATHER
TYPE	COW LEATHER
TANNING METHOD	VEGETABLE TANNED
COUNTRY OF ORIGIN	GERMANY
THICKNESS	1.00-1.25 1.25-1.50 1.50-2.00 2.00-2.50 2.50-3.00 MM.
SIZE	SHOULDERS (1.2 -1.4 M2)
MINIMUM ORDER QUANTITY	5 UNITS
COLORS	NATURAL

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

ROSS NAPPA LEATHER

Upholstery leather

Article numbers:

130101001	ROSS NAPPA BLACK
130102001	ROSS NAPPA WHITE
130103001	ROSS NAPPA D.BROWN
130104001	ROSS NAPPA D.BLUE
130105001	ROSS NAPPA L.GREY
130106001	ROSS NAPPA BORDO
130109001	ROSS NAPPA ROOD
130118001	ROSS NAPPA MARRON
130120001	ROSS NAPPA GEEL
130122001	ROSS NAPPA LARKSPUR
130123001	ROSS NAPPA TURKISH
130124001	ROSS NAPPA FUCHSIA
130126001	ROSS NAPPA GREY
130138001	ROSS NAPPA HELPINK
130139001	ROSS NAPPA LIANE-GROEN
130140001	ROSS NAPPA IGLO-BLUE
130141001	ROSS NAPPA ORANJE

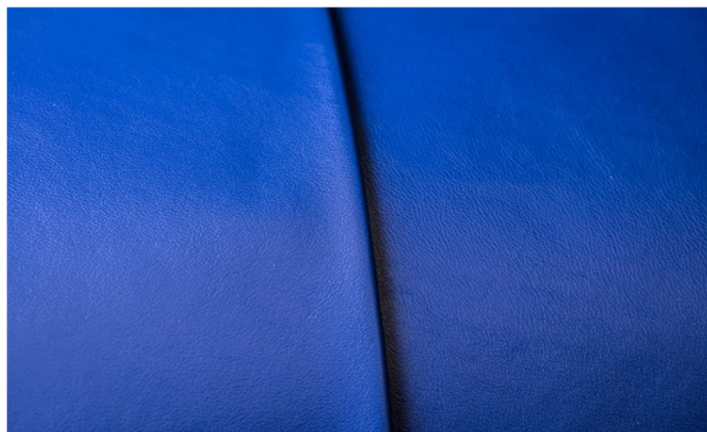

Ross Nappa Leather

Ross Nappa leather is a type of leather that is made from a horsehide. It is known for its softness, resistance to wear and tear, durability, and unique texture.

The horse leather makes the leather thinner and softer than cowhide leather, and it has a unique grain pattern and texture. Ross Nappa leather is often used for high-end fashion items such as gloves, jackets, and bags, as well as for orthopaedics upholstery and automotive applications. It is water-resistant and easy to clean, which makes it a popular choice for various applications.

NAME	ROSS NAPPA LEATHER
TYPE	HORSE LEATHER
TANNING METHOD	CHROME-TANNED
COUNTRY OF ORIGIN	ITALY
THICKNESS	0.7 - 0.8 MM.
SIZE	WHOLE SKIN (4.0 -5.0 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	SEE ARTICLE NUMBERS, ASK FOR OUR SAMPLES

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

COW BOX LEATHER

Upholstery leather

Article numbers:

109101101	COW BOXLEATHER BLACK DGV 1-1¼ MM
109101201	COW BOXLEATHER BLACK DGV 1¼-1½ MM
109101301	COW BOXLEATHER BLACK DGV 1,50-2.00 MM
109101401	COW BOXLEATHER BLACK DGV 1,75-2,00 MM
109101501	COW BOXLEATHER BLACK DGV 2-2½ MM
109102201	COW BOXLEATHER WHITE 1¼-1½ MM
109102401	COW BOXLEATHER WHITE 1,75-2,00 MM
109104401	COW BOXLEATHER BLUE DGV 1,75-2,00 MM
109104501	COW BOXLEATHER BLUE DGV 2-2½ MM
109105001	COW BOXLEATHER GREY DGV 1,5 MM
109105011	COW BOXLEATHER GREY 2-2,5 MM
625200125	COW BOXLEATHER BLACK 2,2-2,4 MM.

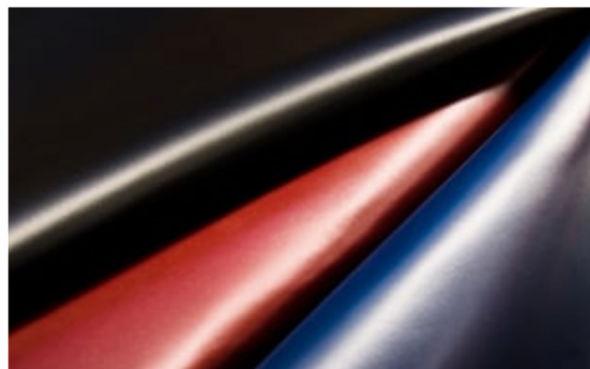

Cow box leather

The name "box leather" originates from the process of treating the leather to make it stiff and durable. In this process, the leather is treated with a solution containing tannins, such as oak bark extract or alum, which causes the fibers in the leather to bond tightly together. This process is called "boxing" and results in leather that is stiff, hard-wearing, and resistant to water and moisture.

The term "box leather" is used to describe a variety of different types of leather that have undergone this process, including calf, cow, and goat leather. The resulting leather is often used in the production of high-quality shoes, boots, and other leather goods that require a high degree of durability and longevity.

NAME	COW BOX LEATHER
TYPE	COW LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	GERMANY
THICKNESS	1.0-1.25 1.25-1.50 1.50-1.75 1.75-2.00 2.00-2.50 MM.
SIZE	HALF SKIN (2.0 -2.5 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	BLACK, WHITE, BLUE, GREY.

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

RADOVER

Upholstery leather

Article numbers:

106000010	RADOVER-DANKO
106000011	RADOVER-PETAN
106000012	RADOVER-TANEL
106000013	RADOVER-ADELE
106000014	RADOVER-KROSE



Radover, buffalo leather

The buffalo leather Radover has a special polyurethane finish with a foam, which ensures that the leather has a unique and natural grip. The basis for the leather is laid with the commonly used chrome tanning, which guarantees the best results in all leather tests.

After the first tanning, the "stucco and buffed" process is used to upgrade the hides as much as possible and reduce visible damage. In addition to lightly sanding the top layer, a flexible, filling coating is applied, which shows a very homogeneous surface finish.

Before the finish is applied, the leather is first dyed with normal dyes in the drums.

NAME	RADOVER
TYPE	BUFFALO LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	ITALY
THICKNESS	1.3 -1.5 MM.
SIZE	WHOLE SKIN (4.0 -5.0 M2)
MINIMUM ORDER QUANTITY	1 UNITS
COLORS	DANKO, PETAN, TANEL, ADELE, KROSE

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

UPHOLSTERY WHEELCHAIR LEATHER

Upholstery leather

Article numbers:

131100001	PANAREA
131100002	PANAREA
131100003	PANAREA
131100004	PANAREA
131100005	PANAREA
131100006	PANAREA
131100007	PANAREA
131200002	VIRGILIO
131400001	NEW DELHI
131400002	NEW DELHI
131400004	NEW DELHI
131400005	NEW DELHI



Upholstery wheelchair leather

Upholstery leather used in orthopaedic wheelchairs needs to meet certain requirements in order to ensure maximum comfort and functionality for the user. Firstly, it should be durable and able to withstand constant use without showing signs of wear and tear. It should also be easy to clean and maintain, as hygiene is essential in any orthopaedic setting. The leather should be soft and pliable, yet firm enough to provide support and stability for the user. It should also be breathable to prevent excessive sweating and discomfort. In addition, the leather should be able to mold to the shape of the user's body, providing a custom fit that helps prevent pressure sores and other injuries.

NAME	UPHOLSTERY WHEELCHAIR LEATHER
TYPE	COW LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	ITALY
THICKNESS	0.8 -1.0 MM. 1.0 -1.2 MM. 12 -1.4 MM.
SIZE	WHOLE SKIN (4.0 – 5.0 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	SEVERAL COLORS

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

PIAMONTE NAPPA LEATHER

Upholstery leather

Article numbers:

118100013 PIAMONTE - 70 COLORS

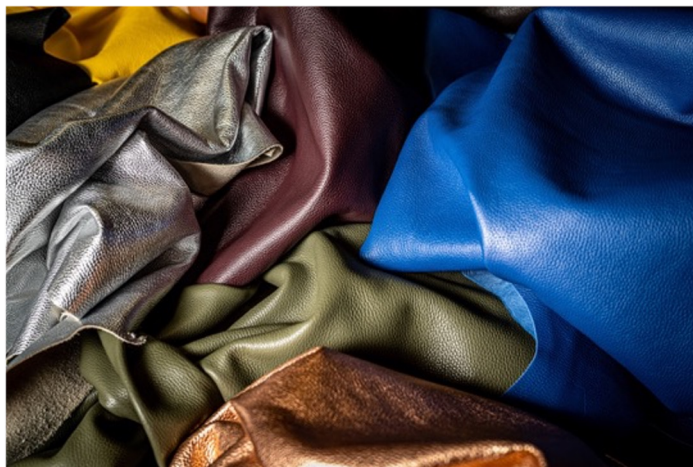

Piamonte

This Italian nappa leather is made from fresh hides using the most advanced technologies and innovative chemical products that reflect the world standards on safety. After washing the wet blue hides to soften them up, they go to the next step of splitting and shaving. This is where the desired thickness of 1.3 mm. - 1.5 mm. is realized. The retanning phase now begins, composed of various washing cycles, the greasing of the hides to soften the dermis and then the delicate dyeing phase. After reaching the desired color tone, the skin is fixed, washed and drained to begin the drying cycles. For this article a toggle drying is used. The skins are stucced and framed to equalize the grain and remove any imperfections that could have a negative effect on the selection. Once the grouting and shaving is finished, the true finishing phase is started, by which the grain is impressed using the mechanical roll with the typical "corona" print that characterizes this article.

NAME	PIAMONTE
TYPE	COW NAPPA LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	ITALY
THICKNESS	1.3 -1.5 MM.
SIZE	WHOLE SKIN (4.0 -5.0 M2)
MINIMUM ORDER QUANTITY	1 UNITS
COLORS	70 COLORS

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

LAMB NAPPA LEATHER

Upholstery leather

Article numbers:

130201001	LAMB NAPPA BLACK	130272001	LAMB NAPPA MIDDEN BRUIN
130202001	LAMB NAPPA IGLO BLUE	130273001	LAMB NAPPA FLIEDER
130203001	LAMB NAPPA ORANJE	130274001	LAMB NAPPA MARLBORO
130204001	LAMB NAPPA HANSA-BLUE	130275001	LAMB NAPPA WHITE 209
130205001	LAMB NAPPA WHITE	130276001	LAMB NAPPA CAFE
130209001	LAMB NAPPA ROOD	130277001	LAMB NAPPA MIDDLE GREY
130211001	LAMB NAPPA NEGRO	130278001	LAMB NAPPA TEAL
130222001	LAMB NAPPA LARKSPUR	130279001	LAMB NAPPA LIBELLE
130223001	LAMB NAPPA TURKISH	130280001	LAMB NAPPA 253 GOUD
130224001	LAMB NAPPA FUCHSIA	130281001	LAMB NAPPA 253 SILVER
130228001	LAMB NAPPA LIANE/GROEN	130294001	LAMB NAPPA TABAK
130240001	LAMB NAPPA YELLOW	130297001	LAMB NAPPA LISSE
130250001	LAMB NAPPA PURPLE		
130270001	LAMB NAPPA CYCLAAM		
130271001	LAMB NAPPA PORCELEIN		

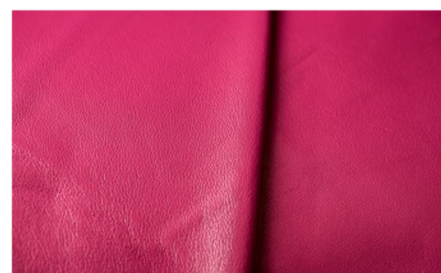

Lamb Nappa leather.

Lamb Nappa leather is highly valued for its soft, supple texture and durability. Nappa leather is made from the top-grain of lamb hides, which means it comes from the top layer of the skin and is of the highest quality. The tanning process used to make nappa leather involves using a chromium-based solution, which makes the leather resistant to water and stains.

Lamb nappa leather is known for its ability to age well, developing a beautiful patina over time. It is also lightweight, making it ideal for use in clothing, fashion and accessories. It has a fine grain pattern and creates a smooth, elegant finish. Overall, lamb nappa leather is highly sought after due to its softness, durability, and ability to age gracefully.

NAME	LAMB NAPPA
TYPE	LAMB LEATHER
TANNING METHOD	CHROME-TANNED
COUNTRY OF ORIGIN	EUROPE
THICKNESS	0.7-0.8 MM.
SIZE	WHOLE SKINS (0.6 – 0.8 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	SEE ARTICLE NUMBERS (ASK FOR COLOR SAMPLES)

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

COW COATING LEATHER

Orthotic Upholstery leather

Article numbers:

300100081	COW COATING LEATHER FLESH 0,8 MM.
300100121	COW COATING LEATHER FLESH 1,2-1,4 MM.
300100161	COW COATING LEATHER FLESH 1,6-1,8 MM.
300105081	COW COATING LEATHER GREY 0,8 MM.
300105121	COW COATING LEATHER GREY 1,2-1,4 MM.
300105161	COW COATING LEATHER GREY 1,6-1,8 MM.
300107081	COW COATING LEATHER YELLOW 0,8 MM.
300107121	COW COATING LEATHER YELLOW 1,2-1,4 MM.
300107161	COW COATING LEATHER YELLOW 1,6-1,8 MM.



Cow coating leather (Upholstery for Orthopaedics)

Cow coating leather is often used in orthopaedics to provide a better fit and support for orthopaedics, prostheses, orthoses, insoles or shoes. These types of leather are used to reduce pressure and friction between the prostheses, orthoses, insoles or shoes and the skin. They also provide some breathability to absorb moisture and keep the skin dry. The cow coating leather combines elasticity with strength and is typically more durable than other types of leather, providing a longer lifespan.

NAME	COW COATING LEATHER
TYPE	COW LEATHER
TANNING METHOD	CHROME TANNED
COUNTRY OF ORIGIN	GERMANY
THICKNESS	0.8 - 1.0 MM. 1.2 - 1.4 MM. 1.6 - 1.8 MM.
SIZE	HALF HIDES (2.0 - 2.4 M2)
MINIMUM ORDER QUANTITY	5 UNITS
COLORS	FLESH COLOR, GREY, YELLOW

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

COW LINING LEATHER

Lining leather

Article numbers:

128400001	COW LINING	NATUREL GLAD
128400002	COW LINING	NATUREL PERFOR.
128600001	COW LINING	CHROMEFREE
135700110	COW LINING	BEIGE
135800110	COW LINING	ORGANIC NATUREL
135800111	COW LINING	ORGANIC NAT SEMI PERFOR
300100001	COW LINING	GLAD 0,8 MM
300142000	COW LINING	NATUREL SEMI PERFOR
625200100	COW LINING	BEIGE CHROMEFREE
116105001	SHOE LINING	GREY

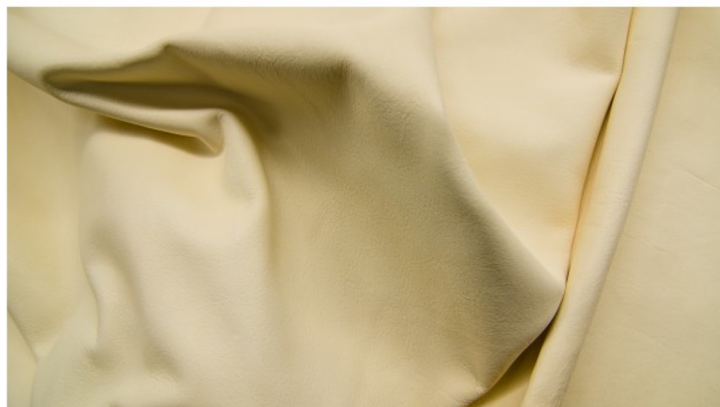

Cow Lining leather

Cow lining leather refers to a type of leather that is typically thinner and more flexible than other types of leather, making it well-suited for use as a lining material in shoes, bags, and other leather goods. It can also be used for other applications, such as in the production of leather garments, belts, and small leather goods. The Cow lining leather offers comfort, durability, breathability, moisture management and a certain aesthetic aspect. Leather linings can add a touch of luxury and elegance to a pair of shoes, making them more visually appealing to the wearer.

NAME	COW LINING LEATHER
TYPE	COW LEATHER
TANNING METHOD	CHROME-TANNED VEGETABLE TANNED
COUNTRY OF ORIGIN	GERMANY
THICKNESS	0.8 – 1.0 MM. 1.1 – 1.2 MM. 1.2 – 1.3 MM.
SIZE	HALF SKIN (2.0 -2.5 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	NATURAL BEIGE GREY

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

CALF LINING LEATHER

Lining leather

Article numbers:

133100100	CALF LINING	135500172	CALF LINING
133100101	CALF LINING	135500182	CALF LINING
133100109	CALF LINING	135500580	CALF LINING
133100110	CALF LINING	135500581	CALF LINING
135106081	CALF LINING	135500582	CALF LINING
135108101	CALF LINING	135500680	CALF LINING
135108102	CALF LINING	135500681	CALF LINING
135206081	CALF LINING	135500682	CALF LINING
135206082	CALF LINING	135500780	CALF LINING
135208101	CALF LINING	135500782	CALF LINING
135208102	CALF LINING	422500101	CALF LINING NATUREL
135208103	CALF LINING	422500162	CALF LINING NATUREL

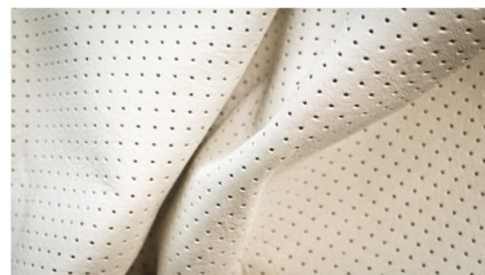

Calf lining leather

Calf lining, as an inner lining or as a finishing touch for an insole, provides a neat and beautiful completion of your product. Calf lining is available in as both smooth and (semi)perforated skins. Calf leather is a popular choice for lining leather in insoles and shoes for several reasons. It is known for its durability and strength, which means that it can withstand the wear and tear of daily use. This makes it ideal for use in footwear, where the lining can be subjected to a lot of friction and pressure. In addition, calf leather is also known for its softness and flexibility, which makes it comfortable to wear. The natural grain of the leather provides a texture that is not only aesthetically pleasing but also adds to the overall comfort of the shoe. Finally, calf leather is also relatively easy to work with, which means that it can be cut and shaped into the desired size and shape for insoles and shoe linings.

NAME	CALF LINING LEATHER
TYPE	CALF LINING LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	GERMANY
THICKNESS	0.6 – 0.8 MM. 0.8 -1.0 MM.
SIZE	WHOLE SKIN (1.0 -1.5 M2)
MINIMUM ORDER QUANTITY	5 UNITS
COLORS	SEVERAL COLORS

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

PIG LINING LEATHER

Lining leather

Article numbers:

309100001 PIG LINING SEVERAL COLORS

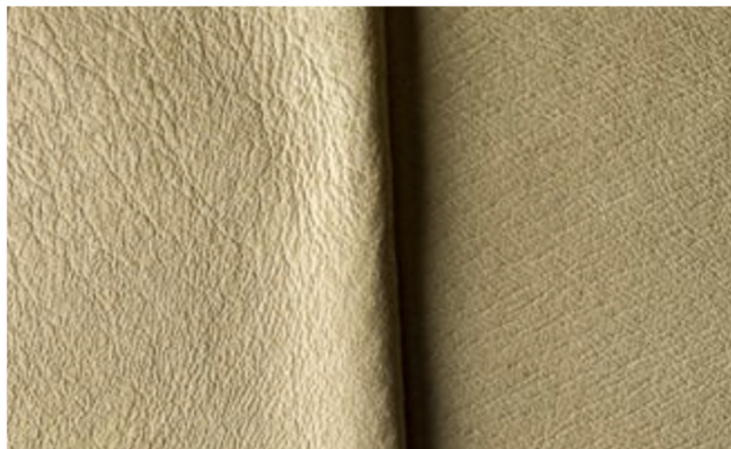

Pig lining leather

Pig leather is a popular choice for lining shoes for several reasons. Firstly, it is known for its soft and comfortable feel, which makes it an excellent choice for providing a cushioned and breathable lining inside shoes. Pig leather is also highly absorbent and can help to wick away moisture from the foot, which can help to prevent odors and bacterial growth inside the shoe. In addition to its comfort and moisture-wicking properties, pig leather is also a durable and long-lasting material. It has a tight grain structure that makes it resistant to abrasion and wear, which is important for a shoe lining that is exposed to constant friction and movement. Pig leather is also relatively inexpensive compared to other types of leather, making it a cost-effective choice for lining shoes.

NAME	PIG LINING LEATHER
TYPE	PIG LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	NETHERLANDS
THICKNESS	0.6 – 0.8 MM.
SIZE	WHOLE SKIN (1.0 – 1.5 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	NATUREL, BEIGE + SEVERAL OTHER COLORS, ASK FOR SAMPLES

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

CHAMOIS LEATHER

Lining leather

Article numbers:

138100201 CHAMOIS LEATHER MIDDLE
138100401 CHAMOIS LEATHER THIN



Chamois leather

Chamois leather, also known as shammy or chamois, is a type of leather that is made from the skin of the chamois, a species of goat-antelope native to Europe. It combines a number of qualities; softness and flexibility, absorbency, chamois leather is highly absorbent, which means it can be used to soak up liquids or moisture quickly and effectively. Durable: despite its softness, chamois leather is also durable and can withstand repeated use and cleaning without losing its shape or structure. Non-abrasive: chamois leather is non-abrasive, which means it can be used to clean or polish delicate surfaces without scratching or damaging them. Natural oils: Chamois leather contains natural oils that make it resistant to water and provide a natural lubrication. Overall, chamois leather can provide a soft, comfortable, and absorbent lining material for orthopedic shoes, helping to improve the overall comfort and health of the feet.

NAME	CHAMOIS LEATHER
TYPE	GOAT-ANTELOPE LEATHER
TANNING METHOD	SPECIAL TANNING
COUNTRY OF ORIGIN	EUROPE
THICKNESS	MIDDLE THIN
SIZE	WHOLE SKIN (0.5 -0.9M2)
MINIMUM ORDER QUANTITY	5 UNITS
COLORS	YELLOW

PRODUCT INFORMATION


Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

PEARL CALF LEATHER Upper leather

Article numbers:

434301001	PEARL CALF BLACK
434302001	PEARL CALF WHITE
434313001	PEARL CALF COL.3/13
434314001	PEARL CALF COL.3/14
434315001	PEARL CALF COL.3/15
434324001	PEARL CALF COL. 3/24
434336001	PEARL CALF COL.3/36
434337001	PEARL CALF COL.3/37
434340001	PEARL CALF COL.3/4
434344001	PEARL CALF COL.3/44
434364001	PEARL CALF COL.3/64

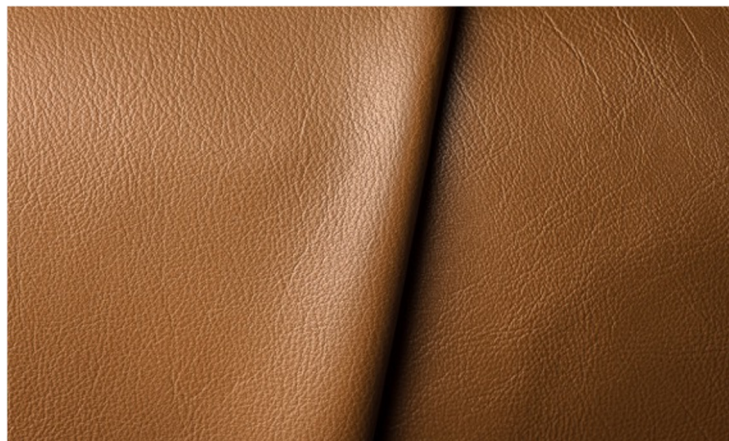

Pearl Calf leather.

This is a high-quality calf leather that is known as one of the best in the world, exclusively made from specially selected South German raw materials. The leather is produced using classic chrome tanning and drum dyeing, and is provided with a thin, water-based finish based on protein/PU, while complying with strict legal requirements. The leather is full-grain and supplied in a thickness of 1.0 - 1.2 mm. It is firm-grained and has a soft, but not floppy touch. The leather has a fine mill grain and a silk gloss with a transparent look and a full, round grip. The leather is equipped with a Scotchgard impregnation that repels dirt, oil, and water, improving its usability properties. The leather offers high wearing comfort and durability. Overall, it is a high-quality leather suitable for the production of luxurious leather goods and shoes.

NAME	PEARL CALF LEATHER
TYPE	CALF LEATHER
TANNING METHOD	CHROME-TANNED
COUNTRY OF ORIGIN	EUROPE
THICKNESS	1.0 -1.2 MM.
SIZE	WHOLE SKINS (2.0 -2.4 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	SEE ARTICLE NUMBERS (ASK FOR COLOR SAMPLES)

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

ALPINE CALF LEATHER

Upper leather

Article numbers:

434301001	ALPINE CALF LEATHER BLACK
434302001	ALPINE CALF LEATHER WHITE
434313001	ALPINE CALF LEATHER KL.3/13
434314001	ALPINE CALF LEATHER KL.3/14
434315001	ALPINE CALF LEATHER KL.3/15
434324001	ALPINE CALF LEATHER KL. 3/24
434336001	ALPINE CALF LEATHER KL.3/36
434337001	ALPINE CALF LEATHER KL.3/37
434340001	ALPINE CALF LEATHER KL.3/4
434344001	ALPINE CALF LEATHER KL.3/44
434364001	ALPINE CALF LEATHER KL.3/64



Alpine Calf leather.

The Alpine calf leather comes from specific regions in southern Germany and is considered to be one of the best calf leathers in the world. The leather is produced using classic chrome tanning and barrel dyeing methods, and is finished with a thin, water-based protein/Pu-based finish that meets strict legal requirements.

The leather is described as being full-grain, with a thickness of 1.4 - 1.6 mm, and has a firm yet soft touch, good trimming, and high cutting yield. It has a distinctive pebble grain, elegant two-tone appearance, and a silky sheen. It is also treated with a Scotchgard impregnation to make it resistant to dirt, oil, and water, and is guaranteed to be durable and comfortable to wear.

NAME	ALPINE CALF LEATHER
TYPE	CALF LEATHER
TANNING METHOD	CHROME-TANNED
COUNTRY OF ORIGIN	EUROPE
THICKNESS	1.4 -1.6 MM.
SIZE	WHOLE SKINS (2.0 -2.4 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	SEE ARTICLE NUMBERS (ASK FOR COLOR SAMPLES)

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

TULIP CALF LEATHER

Upper leather

Article numbers:

464601001	TULIP CALF BLACK
464602001	TULIP CALF BIANCA
464603001	TULIP CALF JASPER BLUE
464604001	TULIP CALF MID GREY
464605001	TULIP CALF SCARLETT
464606001	TULIP CALF NOBLE BRANDY

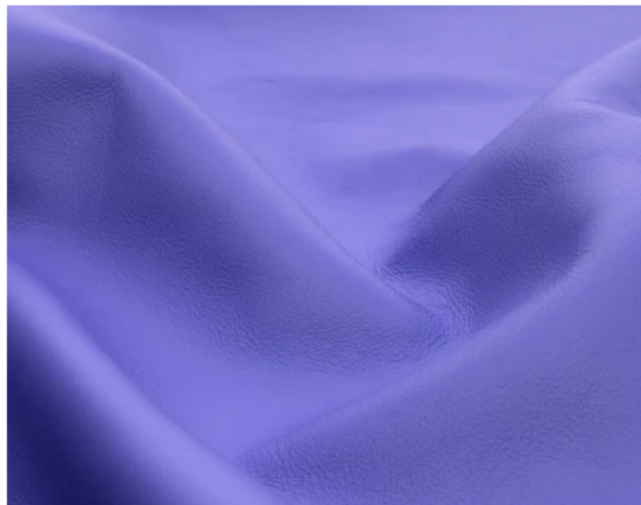

Tulip Calf leather.

Calf leather is derived from the hides of young cows, typically less than six months old. It is known for its softness, smooth texture, and durability. Calf leather is highly valued in the leather industry due to its fine grain and supple feel, making it suitable for various applications, including upholstery and upper leather for shoes.

In orthopedic upholstery, high-quality leather can be used to cover and pad various orthopedic devices such as braces, splints, and custom orthotics. It can also be easier to clean and maintain compared to other materials. When it comes to upper leather for shoes, calf leather is often a preferred choice due to its combination of softness, flexibility, and strength. Calf leather uppers offer comfort, moldability, and the ability to conform to the foot's shape over time. They also have good breathability, which can help in preventing moisture buildup and keeping the feet dry.

NAME	TULIP CALF LEATHER
TYPE	CALF LEATHER
TANNING METHOD	CHROME-TANNED
COUNTRY OF ORIGIN	NETHERLANDS
THICKNESS	1.2 -1.4 MM.
SIZE	HALF SKINS (1.5 - 2.0 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	BLACK, BIANCA, JASPER BLUE, MID GREY, SCARLETT AND NOBLE BRANDY

PRODUCT INFORMATION

Orthopaedics Collection


HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

RUNDOR COW LEATHER

Upper leather

Article numbers:

135900110	RUNDOR VO COFFEE 1.1 - 1.3 MM.
135900210	RUNDOR VO CREAM 1.1 - 1.3 MM.
135900310	RUNDOR VO TERRA 1.1 -1.3 MM.
135900410	RUNDOR VO VINO 1.1 - 1.3 MM.
135900510	RUNDOR VO SAND 1.1 -1.3 MM.
135900710	RUNDOR VO TAUPE 1.1 -1.3 MM.
135900810	RUNDOR VO BEIGE 1.1 -1.3 MM.
135900910	RUNDOR VO TDM 1.1 - 1.3 MM.
135901210	RUNDOR VO CARAMEL 1.1 - 1.3 MM.
135901310	RUNDOR VO DESERT 1.1 - 1.3 MM.
135901410	RUNDOR VO OCEAN 1.1 - 1.3 MM.
135901510	RUNDOR VO TOBACCO 1,1-1,3 MM.
135901610	RUNDOR VO STONE 1.1 -1.3 MM.
135901710	RUNDOR VO GREY 1,1-1,3 MM.
135901810	RUNDOR VO BLACK 1,1-1,3 MM.
135901910	RUNDOR VO WHITE 1.1 -1.3 MM.
135902110	RUNDOR VO BORDO 1.1'1.3 MM.

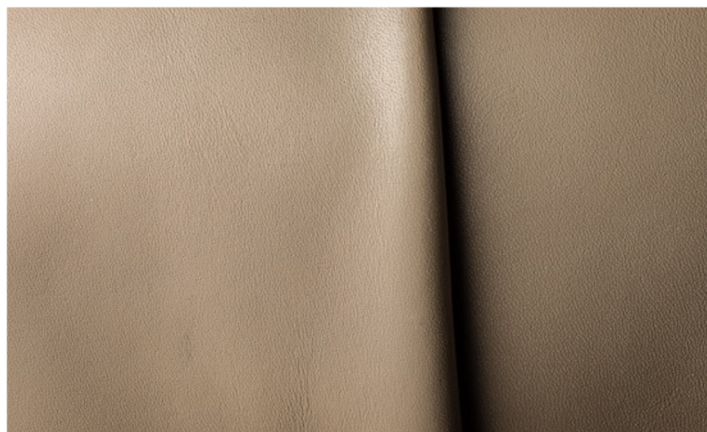

Rundor Cow Leather

Rundor Cow leather is a relatively firm and sturdy chrome-tanned leather. It presents as a smooth, supple and quiet leather, which will withstand wear and tear, not absorb too much moisture and has a high durability. It is made from the top layer of cowhide, which is known as full-grain leather, and retains the natural texture and grain of the animal skin. This gives the leather a unique and authentic appearance that is highly valued. Cow upper leather is also flexible and can be easily molded into different shapes and styles, allowing shoemakers to create a wide range of designs. Another advantage is its breathability. It allows air to circulate freely, which helps to keep the feet cool and dry, reducing the risk of odors and bacterial growth. Cow upper leather can also be treated and finished in a variety of ways to enhance its appearance and performance.

NAME	RUNDOR COW LEATHER
TYPE	COW LEATHER
TANNING METHOD	CHROME-TANNED
COUNTRY OF ORIGIN	GERMANY
THICKNESS	1.1 -1.3 MM.
SIZE	HALF SKIN (2.0 -2.5 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	SEE ARTICLE NUMBERS, ASK FOR OUR SAMPLES

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

CHROME LINES

Straps & Braces leather

Article numbers:

300303151	CHROME LINES HAVANNA 15 MM
300303201	CHROME LINES BROWN 20 MM
300303251	CHROME LINES BROWN 25 MM
300305201	CHROME LINES GREY 20 MM
300305251	CHROME LINES GREY 25



Chrome lines

Mineral-tanned leather that stands out for its strength and stiffness, which means it will not stretch. Due to the limited width of up to 25 mm, this leather is very suitable for long reins or straps. Using a special digitally supported cutting table the chrome lines are cut from one piece and can be up to 70 meters long.

NAME	CHROME LINES
TYPE	COW LEATHER
TANNING METHOD	CHROME TANNING
COUNTRY OF ORIGIN	GERMANY
THICKNESS	4.0 - 4.5 MM.
SIZE	+/- 70 METERS (ROLE)
MINIMUM ORDER QUANTITY	25 LENGTH METERS
COLORS	HAVANNA, BROWN, GREY

PRODUCT INFORMATION

Orthopaedics Collection

HANDELSMAATSCHAPPIJ
VANOOSTERUMLEDER
sinds 1929

LEATHER FOR BELTS

Straps & braces leather

Article numbers:

422600162	BELT DOSSET NATUREL 1.6-1.8 MM
422600225	BELT DOSSET NATUREL 2.0-2.5 MM
422600253	BELT DOSSET NATUREL 2.5-3.0 MM.



Vegetable tanned belt leather.

Vegetable tanned belt leather is a type of leather that is made using a traditional tanning method. This type of leather is often used for making belts and other small leather goods.

The leather is tanned slowly and carefully, using a blend of tree barks, leaves, and other natural materials, which gives it a unique character and appearance. It is important to note that vegetable tanned leather is more environmentally friendly than other types of leather tanning, as it does not involve the use of harmful chemicals. It has a firm and sturdy feel, which makes it ideal for use in heavy-duty applications such as belts.

NAME	VEGETABLE TANNED BELT LEATHER
TYPE	COW LEATHER
TANNING METHOD	VEGETABLE-TANNED
COUNTRY OF ORIGIN	GERMANY
THICKNESS	1.6 -1.8 MM. 2.0 -2.5 MM. 2.5 - 3.0 MM.
SIZE	DOSSET (2.0 -2.2 M2)
MINIMUM ORDER QUANTITY	1 UNIT
COLORS	NATURAL